



## PEDESTAL HEIGHT GAUGE OPERATION MANUAL

### PEDESTAL HEIGHT GAUGE

**Model:**

GP-GG-PH-001

**Application:**

This gauge is used to measure the distance from the cup pedestal to the top of the mounting cup (refer to dimension 'A' as shown in Figure 1).

**Calibration:**

Using the calibration gauge provided, verify that the gauge reads the same measurement as shown in the calibration gauge (3 mm as shown in Figure 2). If necessary, loosen the set screw and adjust the gauge in order to calibrate the gauge. Tighten the set screw once calibration is completed.

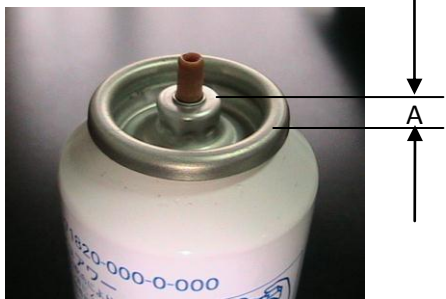


Figure 1: Pedestal height



Figure 2: Calibration method



Figure 3: Using method

**Measuring method:**

Refer to Figure 3, place the gauge over the aerosol valve. Ensure that the gauge is in contact with both the cup pedestal and the top of the mounting cup.